 


Wired Barcode Scanner

Quick Guide

Factory Default



Version Information



Buzzer

High (Default)



Low




Middle




Communication Interfaces

USB Mode

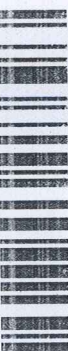


RS232 serial port

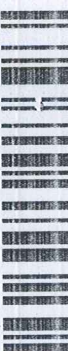

Scanning Mode

Manual Mode (Default)

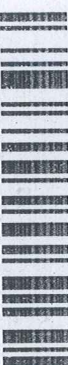

Continuous Scanning Mode



Suffix Quick Setup

CR (Default)



CR+LF



LF



None



Prefix

Transmit Prefix



Do Not Transmit Prefix (Default)



Scan Prefix

(0~16 Chars, 2Digits/Char; 00~FF; 00*)

